



ASSOCIATION GUIDE



BL-NR



App download

Download the MySOLEM app on your smartphone or tablet from the **App Store** or **Google Play**.



Battery installation



1 Remove the green cover and the sealing cap



2 Place the battery in the compartment respecting the polarity




3 Replace the sealing plug and the green cap.

Configuration

1. Turn on Bluetooth on your smartphone or tablet.

If the Bluetooth is not turned on, the MySOLEM app will prompt you to activate it and it guide you to your settings in order to do so.

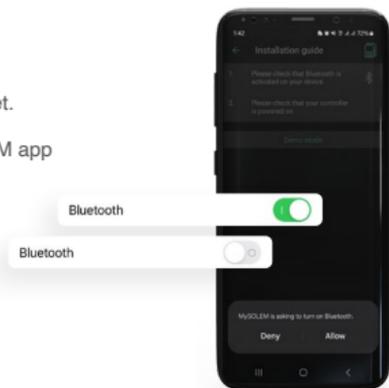

2. Opening the app and installing a product for the first time:




Launch the MySOLEM app



Click on the 3 « + »




Tap on « BL-NR » from the list

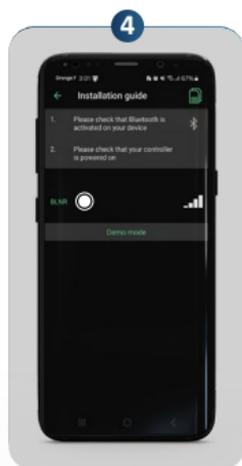

Tap on the number displayed in green. It is the same number found on the underside of the product.




See the label on the underside of the product.

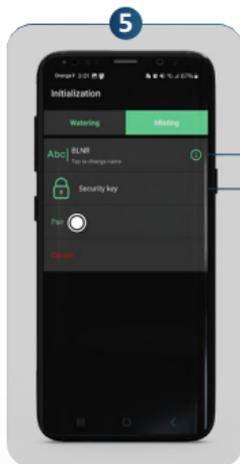

Tap on « Pair »



Change the name of the device if desired.

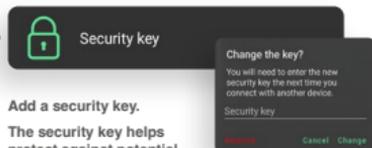

Add a security key.

The security key helps protect against potential threats from unauthorized neighbors.



After a few seconds, your device will be connected.

To schedule, rename, or issue manual commands, open the MySOLEM app. Select the device by pressing either the number or its name, and then follow the application's prompts. If pairing has already been established and you're replacing the battery, there is no need to redo the pairing. Simply wait 2 minutes while the product pairs with your phone.

For additional information, please visit our support website at support.mysolem.com.